

INTRODUCTION

Media Insertion

To prevent damage to your Media Reader and/or media card, it is important that the media card be correctly inserted into the Reader. See the drawings below, which illustrate the proper orientation for insertion of your media card.



MS/MS Duo™



SD/MMC/MiniSD



M2



SmartMedia™/xD



CF/Microdrive™



Micro SD

Important Note: The Universal Media Reader uses a combination slot designed to accommodate both Memory Stick and M2 card formats. Only a single card may be plugged into the combination slot at any time.

INTRODUCTION

| | | | | | |
|-------------------|-----------------|----------|----------|----------|----------|
| Table of Contents | SECTIONS | 1 | 2 | 3 | 4 |
|-------------------|-----------------|----------|----------|----------|----------|

Supported Media

| | |
|--------------------------|--|
| CompactFlash® | (CF)CH I, CF II, CF-Ultra II, CF-Pro, CF-Pro II, CF-Extreme, CF-Extreme III, CF-PSP II, CF-Super, CF-Ultra X |
| Microdrive™ | Microdrive |
| Memory Stick® | MS, MS-MagicGate™, HS-MS-PRO MagicGate, MS-DUO, MS-DUO MagicGate, MS-PRO DUO, HS-MS-PRO DUO, MS-PRO DUO-PSP, MS-PRO-Gaming, M2 |
| Secure Digital Card (SD) | SD, SDC, SD-Pro, SD-Ultra, SD-Ultra II, SD-Ultra II Plus, SD-Extreme III, SD-Ultra X, SD-Turbo, SD-Super, SD-Max, Mini SD, Mini SD-Pro, Mini SD-Pleomax |
| MultiMediaCard (MMC) | MMC, MMC-Pleomax, MMC Pro, HS-MMC, MMC Plus, MMC-Plus Turbo, RS MMC, RS MMC-Pleomax, RS MMC-Speed, RS MMC-Max, MMC Mobile, MMC Mobile-ProC, MMC Mobile-Pocketnet |
| xD-Picture Card™ | (xD)XD(M), XD(H) |
| SmartMedia™ (SM) | SM |
| TransFlash™ | T-Flash, Micro SD |

In addition to Media Readers, Belkin manufactures an entire line of USB and PC accessories. Please visit www.belkin.com for details.