


Flip Software Instructions (Windows version)



Once you've successfully downloaded Flip Software to both your computers, you can flip between computers using a desktop icon or a keyboard hot-key sequence.

Desktop Icon

To flip computers using the desktop icon, right-click on the  icon in the taskbar in the lower-right corner of your screen. Then select one of three flipping options:

- "Flip All" – Flips your monitor, keyboard, mouse, and speakers
- "Flip Audio" – Flips your speakers only
- "Flip Video" – Flips your monitor, keyboard, and mouse only


Hot Keys

To enable hot keys for your computers, right-click on the  icon in the taskbar, select "Options", and then select "Enable Hotkey Switching". To flip computers using hot keys, press the "Ctrl" button on your keyboard twice in rapid succession. This is the default hot-key sequence. To change the hot-key sequence, right-click on the  icon, select "Options", and then choose a new switching key.

Flip Software Instructions (Mac OS® version)



Once you've successfully downloaded Flip Software to both your computers, you can flip between computers using a desktop icon or a keyboard hot-key sequence.

Desktop Icon

To flip computers using the desktop icon, click once on the  icon in the menu bar in the upper-right corner of your screen. Then select one of three flipping options:

- "Flip All" – Flips your monitor, keyboard, mouse, and speakers
- "Flip Audio" – Flips your speakers only
- "Flip Video" – Flips your monitor, keyboard, and mouse only

Hot Keys

To enable hot keys for your computers, click on the  icon in the menu bar, select "Options", and then select "Enable Hotkey Switching". To flip computers using hot keys, press the "Ctrl" button on your keyboard twice in rapid succession. This is the default hot-key sequence. To change the hot-key sequence, click on the  icon, select "Options", and then choose a new switching key.