

### Make sure you have the following:

Installation Software CD  
Wireless G Plus MIMO Notebook Card  
User Manual

### System Requirements

PC-compatible laptop computer with one available CardBus slot  
CD-ROM drive  
Windows® 98SE, 2000, Me, XP

### Quick Setup →

## 1. Install

### Important Note:

Install the software before inserting the Card

- 1.1 Insert the Installation Software CD into your CD-ROM drive.



- 1.2 The Belkin Wireless Client Utility Setup screen will automatically appear (may take 15–20 seconds to appear).

- 1.3 Click "install" from the menu.

(Click)

Install

**Note:** If the Belkin Wireless Networking Utility setup screen does not appear within 20 seconds, access your CD-ROM: double-click on the "My Computer" icon and then double-click on the CD-ROM drive into which you have placed the installation CD. Double-click on the folder named "Files", then double-click on the icon named "setup.exe".



- 1.4 The InstallShield Wizard will now start. Click "Next" to continue.

(Click)

Next



- 1.5 You will now see the first of a series of progress screens to help you know where you are in the setup process. Click "Next" to continue.

(Click)


Next



- 1.6 When the installer is done installing the software, you will see the following screen. Click "Finish".

(Click)

Finish

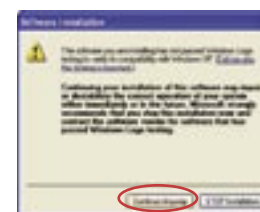

- 1.7 You might see a screen similar to this one. The DOES NOT mean there is a problem. Our software has been fully tested and is compatible with this operating system. Select "Continue Anyway" and follow the on-screen

(Click)

Continue Anyway


## 2. Connect

Plug the Card into an Available CardBus Slot on your Notebook Computer



- 2.1 After the software installation is finished, the message "Please plug in your Notebook Card now" will appear. Insert your Belkin Notebook Card.

**Note:** If your system did not prompt you to insert your Card after the installation is completed, please do so now.

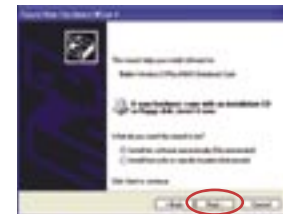

- 2.2 The Found New Hardware Wizard will appear. Select the "Install the software automatically (Recommended)" option and click "Next" to install the hardware.

(Click)

Next



2.3 Hardware installation is now complete. Click "Finish" to close the Wizard.

(Click)

Finish

## 3. Configure

Use the Belkin Wireless Networking Utility



3.1 Double-click the Belkin Wireless Networking Utility icon on the desktop screen.



3.2 The Belkin Wireless Networking Utility screen will appear. Select a network to connect to from the "Available Networks" list and click "Connect".

(Click)

Connect

**Note:** In order to see your available networks, you must be near a working wireless router or access point.



3.3 The Belkin Wireless Networking Utility icon can also be found on the system tray.

**Note:** Double-clicking on the Belkin Wireless Networking Utility icon on the system tray will bring up the "Utility" screen.

## Installation is now complete!

Need help? For further information regarding the installation of this product, please check your User Manual, visit [www.belkin.com/networking](http://www.belkin.com/networking), or call our free technical support.

### Belkin Tech Support

**USA:** 877-736-5771  
310-898-1100 ext. 2263

**Europe:** 00 800 223 55 460

**Australia:** 1800 235 546

**New Zealand:** 0800 235 546

**Singapore:** 800 616 1790

## BELKIN®

[www.belkin.com](http://www.belkin.com)

**Belkin Corporation**  
501 West Walnut Street,  
Compton, CA 90220-5221  
USA  
+1 310 898 1100  
+1 310 898 1111 fax

**Belkin Ltd.**  
Express Business Park  
Shipton Way, Rushden  
NN10 6GL, United Kingdom  
+44 (0) 1933 35 2000  
+44 (0) 1933 31 2000 fax

**Belkin B.V.**  
Boeing Avenue 333  
1119 PH Schiphol-Rijk  
The Netherlands  
+31 (0) 20 654 7300  
+31 (0) 20 654 7349 fax

**Belkin GmbH**  
Hanebergstraße 2  
80637 Munich  
Germany  
+49 (0) 89 143405 0  
+49 (0) 89 143405 100 fax

**Belkin SAS**  
5 Rue du Petit Robinson  
3ème étage, 78350 Jouy en Josas  
France  
+33 (0) 1 34 58 14 00  
+33 (0) 1 39 46 62 89 fax

**Belkin Nordic**  
Knarrarnäsgatan 7  
164 40 Kista  
Sweden  
+46 (0) 8 5229 1870  
+46 (0) 8 5229 1874 fax

© 2006 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed.