

IMPORTANT!

This Guide refers to the following Products:



F5U258

Transfer files between XP and Windows 7

Please read the following carefully;

Synopsis:

This guide is designed to assist those with the Easy Transfer Cable for Windows Vista to use it to transfer files between Windows XP and Windows 7.

The bundled software will not work however you can get it to work with software from Windows 7.

The following steps assume that you have the Windows Easy Transfer installed on your XP computer.

Requirements:

In order to complete the process described in this document the following is required.

- Easy Transfer Cable for Windows Vista
- A Desktop or Laptop running Windows XP
- A Desktop or Laptop running Windows 7

How to transfer files and settings between Windows XP and Windows 7

Plug one end of the Easy Transfer Cable into a spare USB port on your XP computer


The AutoPlay window might appear depending on your preferences. Select “Transfer files and settings”



The “Windows Easy Transfer” should now appear. If you have not got the Windows Easy Transfer software installed then nothing will happen.



Click on the “Next” button. At this point you should close any open programs as the software will detect and ask you to close any programs which may interfere with the transfer.

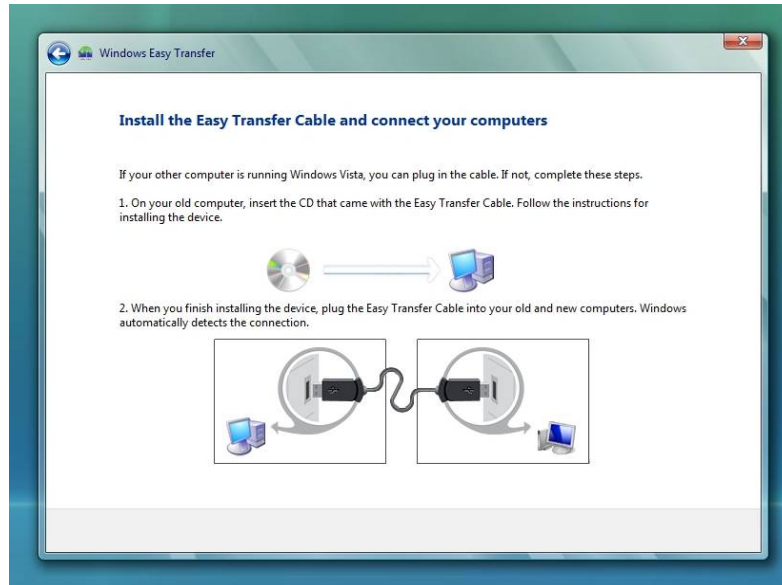


Go to your Windows 7 computer

Plug the other end of the Easy Transfer cable into a spare USB port on this computer.

A Welcome screen should appear. Click on the “Next” button.



The software will now ask you a couple of question about your setup. For the first question select “This is my new computer”.

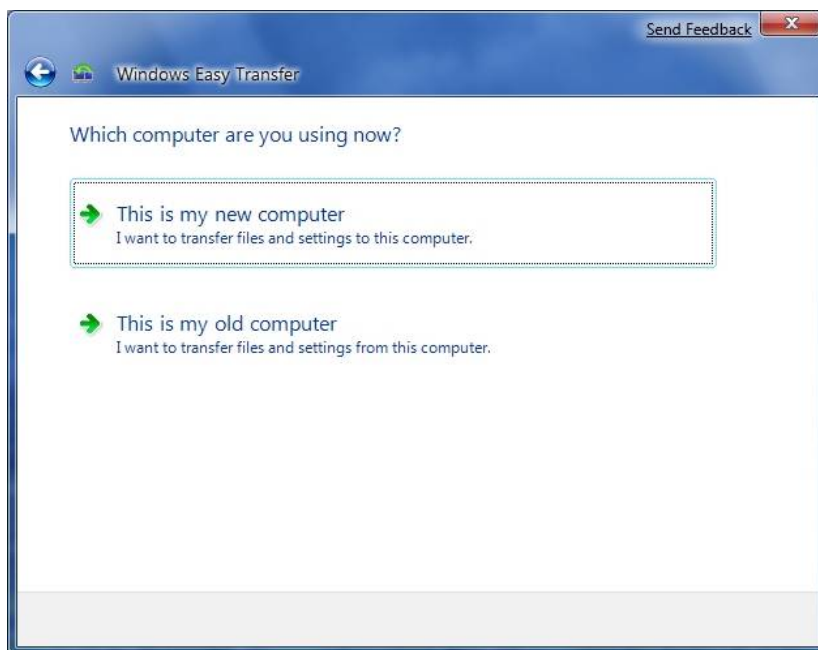


For the next question select “I already installed it on my old computer”



Once you have selected this option your two computers will try to communicate with each other.

After a few seconds the following window should appear “Unable to establish a connection”

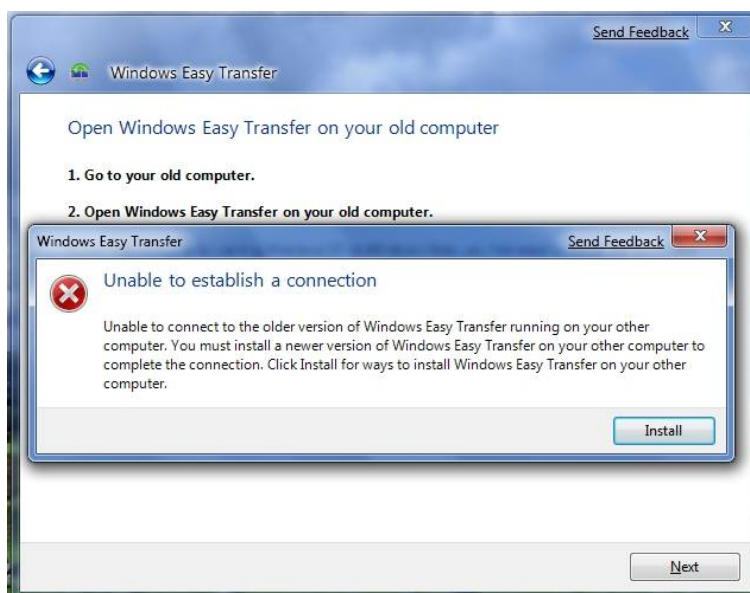

The cable is unable to establish a connection because the software on the XP computer needs to be updated. Click on the “Install button”

You now need to choose a location where to copy a newer version of the software to.



You cannot choose the last option “Easy Transfer cable CD” because the software which comes with the F5U258 is an old version of the Windows Easy Transfer.


The new files will now be copied to the location that you have specified.



Go back to your XP computer

Connect the device where you copied the new files to.

Close the “Windows Easy Transfer” software which originally opened.

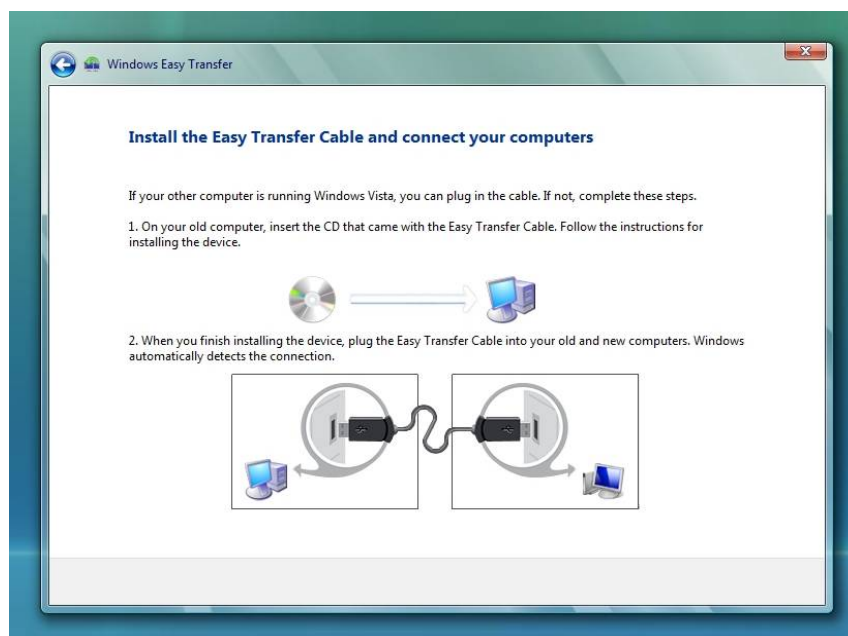

Browse to the location where you copied the new files to. Double click on the “Windows Easy Transfer” shortcut.

Select “Allow” in the User Account Control.


The new software should now start.




A Welcome screen should now appear. Click on the “Next” button.




Select “This is my old computer”

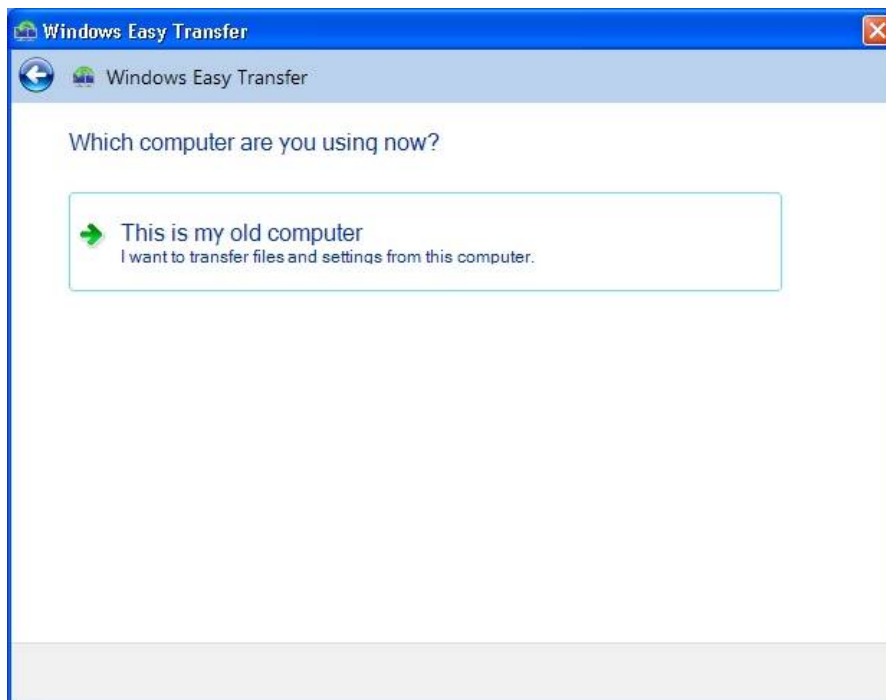


You are now ready to go back to your Windows 7 computer

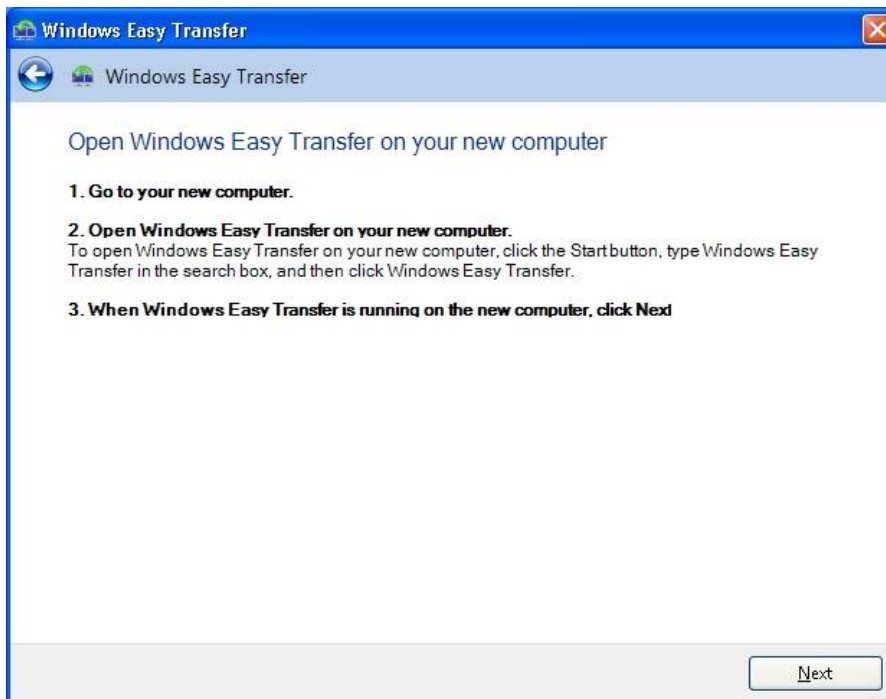


On your Windows 7 computer click on the “Next” button using the “Windows Easy Transfer” software.

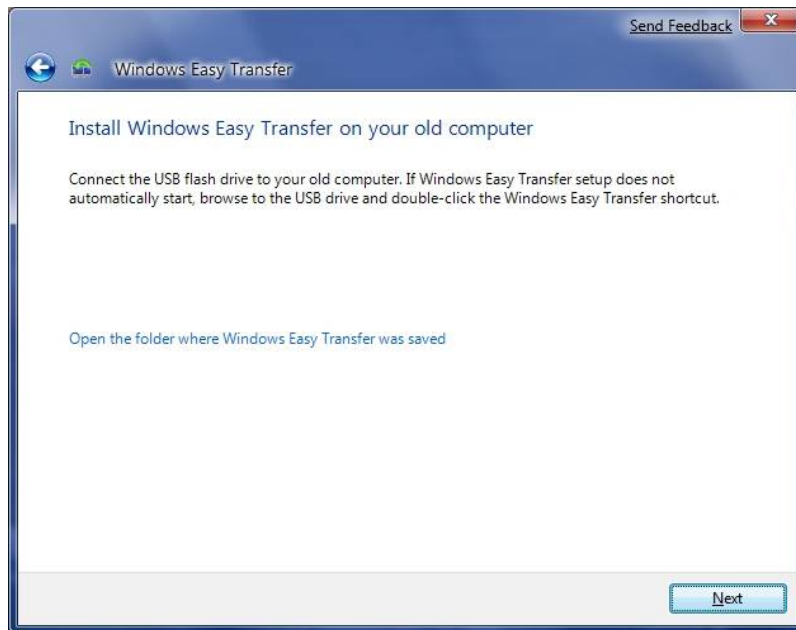


The software should now come up with “Connection Established” and then check for any available updates.

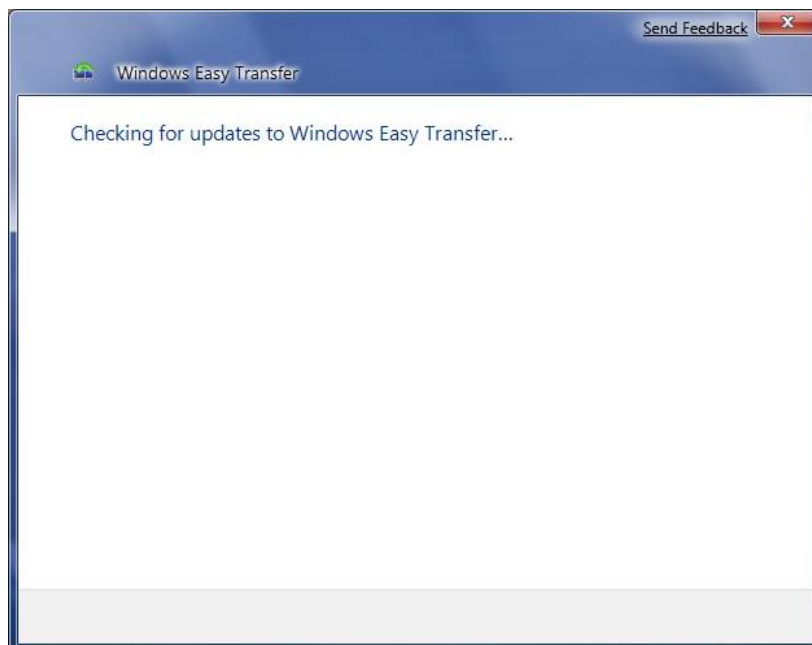

Windows Easy Transfer should now scan your XP computer for all the files which can be transferred to your Windows 7 computer.

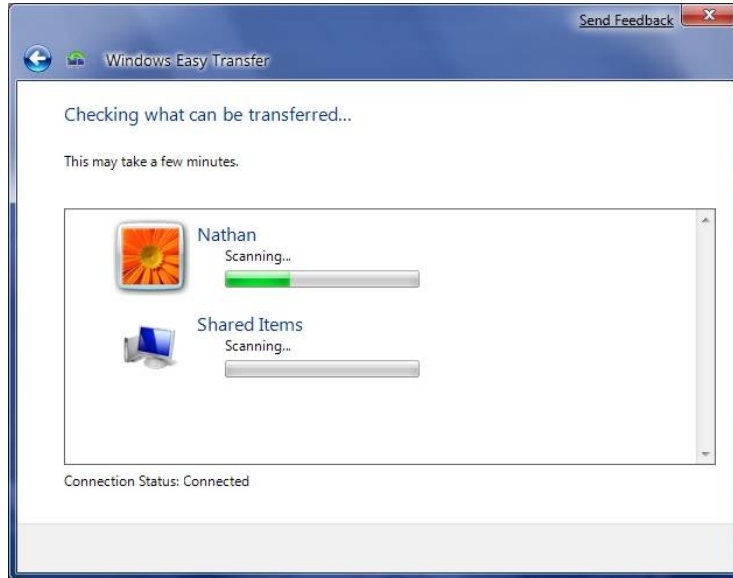


You can now select all the folders and settings which you want to copy to your Windows 7 computer.

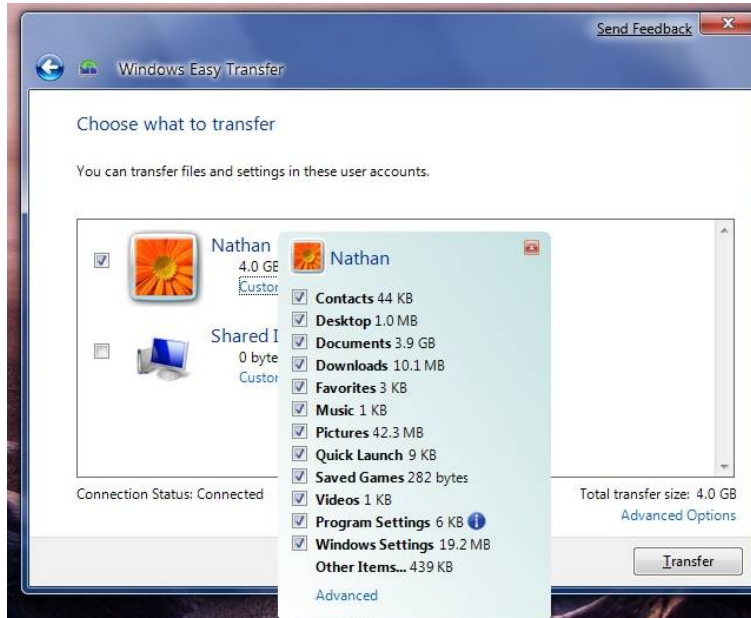

You can also select other locations by selecting “Advanced”

When you are ready select “Transfer”

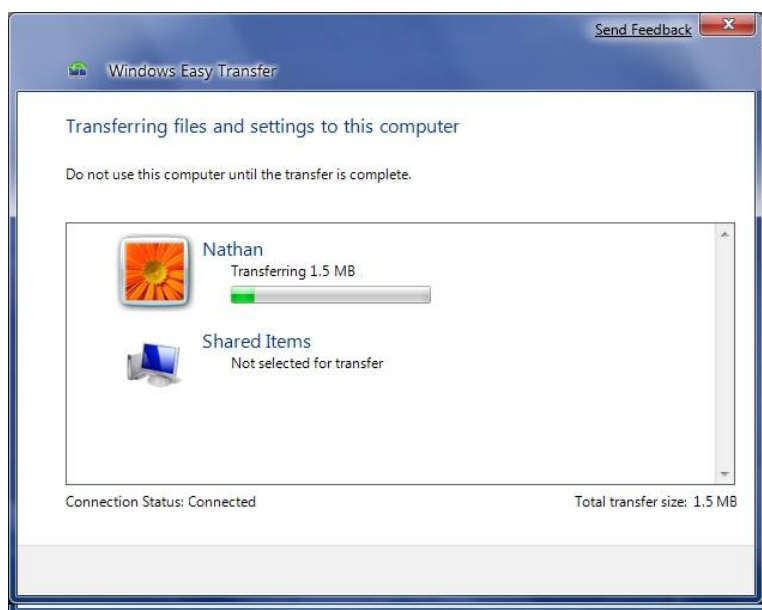

Once the transfer process has completed you can view a log of what was transferred and install any programs that are found on your XP computer.

