



FireWire Notebook Adapter

*Connect your iPod™, camcorder, FireWire®, and
Sony® i.LINK® devices to your PC*



En

Fr

De

NL

Es

It

User Manual

F5U513ea






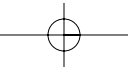


TABLE OF CONTENTS**En**

Introduction	.1
Overview	.2
Specifications	.2
Minimum System Requirements	.3
Package Contents	.3
Hardware Installation	.4
Windows 98 SE Driver Installation	.5
Windows ME Driver Installation	.6
Windows 2000/XP Driver Installation	.7
Information	.8

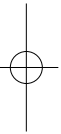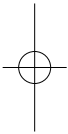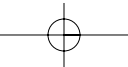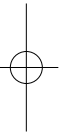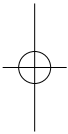

INTRODUCTION

En

Thank you for purchasing the Belkin FireWire Notebook Adapter (the Adapter).

Now you can add three 400Mbps FireWire ports to your Windows 98 SE, Me, 2000, or XP operating system and enjoy the ultrafast speed and Plug-and-Play ease of next-generation FireWire devices.

OVERVIEW

Specifications

- 3 external 6-pin IEEE 1394 ports
- OHCI 1.0-compliant
- IEEE 1394a 2.0-compliant
- Texas Instruments TSB12LV23 OHCI-Lynx 1394 Link Layer Host Controller
- Texas Instruments TSB41LV02 Digital to Analog transceiver
- Supports 100/200/400Mbps data rates
- PC 98 & PCI Power Management v1.0-compliant
- 3.3V operation for CardBus to IEEE 1394 interface
- Optional AC adapter requirements:
 - Voltage: 12V DC
 - Current: 1.6 Amps
 - Plug Size: 3.8mm
 - Plug Polarity: Center positive

Note: *Optional AC adapter is usually only required for devices that do not provide their own power source such as web cameras, certain scanners, and certain pocket hard-disk drives.*

OVERVIEW

En

Minimum System Requirements

- 266MHz Pentium® II (700MHz PIII recommended for video editing)
- 32MB RAM (128MB recommended for video editing)
- Windows® 98 SE, Me, 2000, XP
- 32-bit Type II CardBus slot (Check your laptop owner's manual for CardBus slot specifications)

Package Contents

- Belkin FireWire Notebook Adapter
- User Manual

HARDWARE INSTALLATION

1. Examine your laptop computer and locate the CardBus slot(s).
2. Insert the Adapter into a free 32-bit Type II CardBus slot.
3. Apply power to the laptop and let Windows start normally.

WINDOWS 98 SE DRIVER INSTALLATION

En

1. When Windows has finished loading, the “New Hardware Wizard” will launch and display a window that identifies the Adapter as a “Texas Instruments OHCI Compliant IEEE 1394 Host Controller”. Click “Next”.
2. Select “Search for the Best Driver for Your Device (Recommended)”. Click “Next”.
3. Leave all boxes unchecked. Click “Next”.
4. The “New Hardware Wizard” will now prompt you to select the driver you wish to install. Select “The Updated Driver (Recommended)”. Click “Next”.
5. The “New Hardware Wizard” will now locate and install the proper driver. Click “Next”.
6. You may be prompted to insert your Windows 98 installation CD.
7. Hardware installation is now complete. Click “Finish”.
8. To confirm that the Adapter has been properly installed, open the Windows “System Properties” window and click the “Device Manager” tab. In the list of installed devices, click the “+” sign next to the entry for “IEEE 1394 Bus Controller”. You should find an entry for “Texas Instruments OHCI Compliant IEEE 1394 Host Controller”.

WINDOWS ME DRIVER INSTALLATION

1. When Windows has finished loading, the "New Hardware Wizard" will launch and display a window that identifies the Adapter as a "Texas Instruments OHCI Compliant IEEE 1394 Host Controller".
2. Select "Automatic search for a better driver". Click "Next".
3. Windows will search its driver database and automatically install the correct driver. Click "Finish". You will be prompted to restart your computer. Click "Yes". Installation is now complete.
4. To confirm that the Adapter has been properly installed, open the Windows "System Properties" window and click the "Device Manager" tab. In the list of installed devices, click the "+" sign next to the entry for "IEEE 1394 Bus Controller". You should find an entry for "Texas Instruments OHCI Compliant IEEE 1394 Host Controller".

WINDOWS 2000/XP DRIVER INSTALLATION

En

1. When Windows has finished loading, the “New Hardware Wizard” will launch and display a window that identifies the Adapter as a “Texas Instruments OHCI Compliant IEEE 1394 Host Controller”. Windows will search its driver database and automatically install the correct driver. You may be prompted to restart your computer. If so, click “Yes” to restart. Installation is now complete.
2. To confirm that the Adapter has been properly installed, open the Windows “System Properties” window and click the “Hardware” tab, then click the “Device Manager” button. In the list of installed devices, click the “+” sign next to the entry for “IEEE 1394 Bus Host Controllers”. You should find an entry for “Texas Instruments OHCI Compliant IEEE 1394 Host Controller”.

INFORMATION

FCC Statement

DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin Corporation, of 501 West Walnut Street, Compton, CA 90220, declare under our sole responsibility that the product:

F5U513ea

to which this declaration relates:

Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Declaration of Conformity

We, Belkin Corporation, declare under our sole responsibility that the F5U513, to which this declaration relates, is in conformity with Generic Emissions Standard EN50081-1 and with Generic Immunity Standard EN50082-1 1992.

Belkin Corporation Limited Lifetime Product Warranty

Belkin Corporation warrants this product against defects in materials and workmanship for its lifetime. If a defect is discovered, Belkin will, at its option, repair or replace the product at no charge provided it is returned during the warranty period, with transportation charges prepaid, to the authorized Belkin dealer from whom you purchased the product. Proof of purchase may be required.

This warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; if the product has been modified without the written permission of Belkin; or if any Belkin serial number has been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESSED OR IMPLIED. BELKIN SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

No Belkin dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

BELKIN IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH BELKIN PRODUCTS.



En

BELKIN

belkin.com

Belkin Corporation

501 West Walnut Street
Compton • CA • 90220 • USA
Tel: 310.898.1100
Fax: 310.898.1111

Belkin Components, Ltd.

Express Business Park
Shipton Way • Rushden • NN10 6GL
United Kingdom
Tel: +44 (0) 1933 35 2000
Fax: +44 (0) 1933 31 2000

Belkin Components B.V.

Starparc Building • Boeing Avenue 333
1119 PH Schiphol-Rijk • The Netherlands
Tel: +31 (0) 20 654 7300
Fax: +31 (0) 20 654 7349

Belkin GmbH

Hanebergstrasse 2
80637 München • Germany
Tel: +49 (0) 89 1434 05-0
Fax: +49 (0) 89 / 143405-100

Belkin Tech Support

US: 310.898.1100 ext. 2263
800.223.5546 ext. 2263
Europe: 00 800 223 55 460
Australia: 1800 666 040

© 2003 Belkin Corporation. All rights reserved.
All trade names are registered trademarks of respective manufacturers listed.

P74414ea